


CG260B BRUSHCUTTER

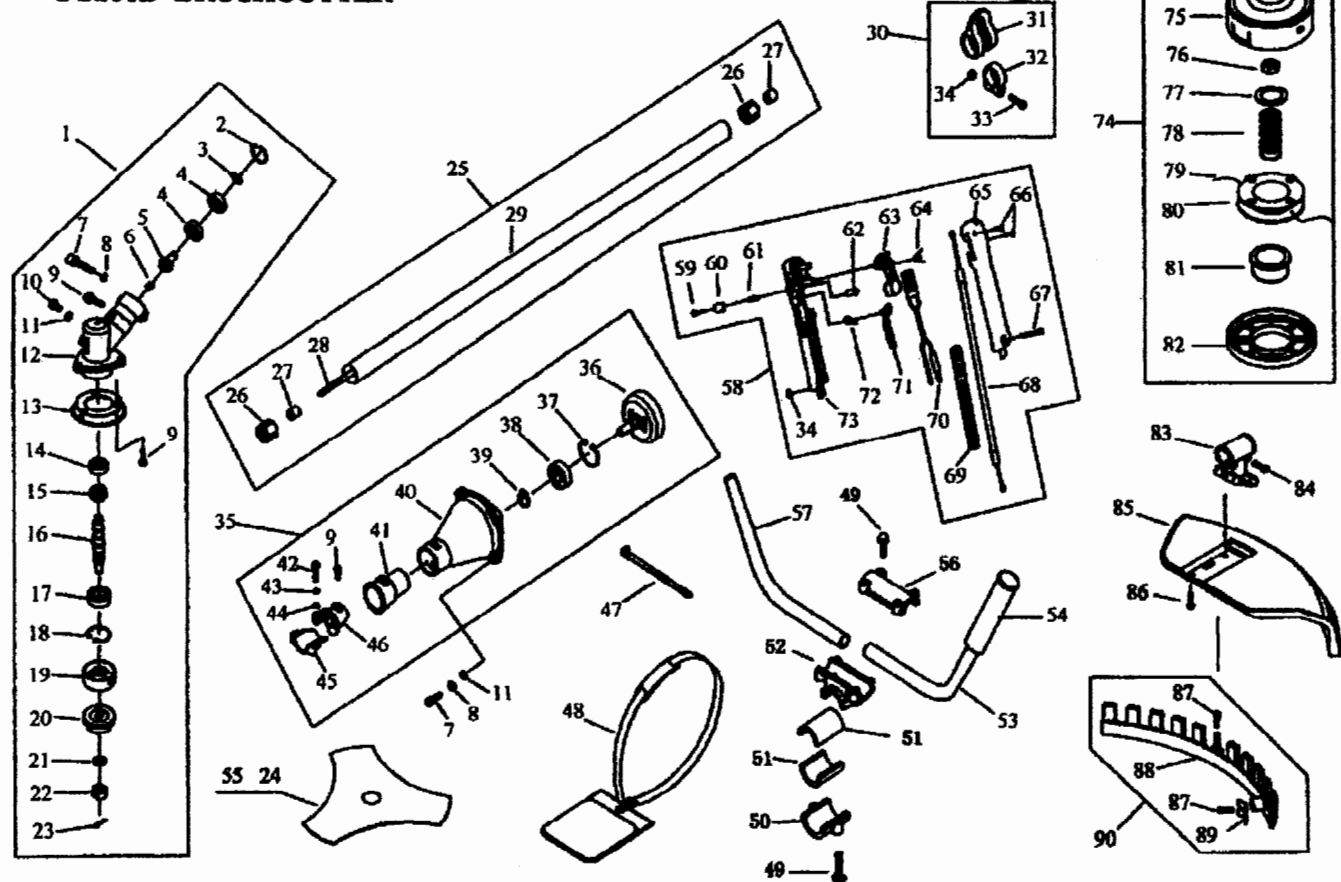


NO	PART NO.	PART NAME	QTY	NO	PART NO.	PART NAME	QTY	NO	PART NO.	PART NAME	QTY
1	CG415.3	Gear Case Assy	1	31	CG260.3.1	Harness Clamp	1	61	BL750.3-7	Spring	1
2	GB/T893.2	Stop Ring 26	1	32	CG260.3-1	Clamp	1	62	HL750.3-8	Clock Pin	1
3	GB/T894.1	Stop Ring 10	1	33	GB/T70.1	Screw M5×20	1	63	BL750.3-4	Handgrip	1
4	GB/T276	Bearing 6000-2RS/P5	2	34	GB/T889.1	Nut M5	2	64	BL750.3-1	Spring	1
5	CG415D.6-4	Pinion	1	35	CG260A.1A	Clutch Comp	1	65	BL750.3-5	Box,Right	1
6	CG415.3-1	Steel Plate Cap	1	36	CG260A.1A.1	Clutch Drum Comp.	1	66	GB/T845	Screw ST2.9×18	2
7	GB/T70.1	Screw M6×20	5	37	GB/T893.1	Stop Ring 35	1	67	GB/T70.1	Screw M5×30	1
8	GB/T93	Washer 6	5	38	GB/T276	Bearing 6202-2RS/P5	1	68	CG260B-CE.1.1.1	Cable Comp.	1
9	GB/T9074.4	Screw M5×12	4	39	GB/T894.1	Stop Ring 15	1	69	BG-328A-2	Tube	1
10	GB/T29.2	Bolt M6×12	1	40	CG260A.1A-1	Linker	1	70	CG328.2.1.1	Stop Button Comp.	1
11	GB/T97.1	Washer 6	5	41	CG305F.14-2	Rubber Cover	1	71	BL750.3-3	Handgrip	1
12	BG305.12.4-4	Gear Case	1	42	GB/T70.1	Screw M5×25	2	72	BL750.3-2	Spring	1
13	BG305.12.4-9	Blade Cover	1	43	GB/T93	Washer 5	2	73	BL750.3-6	Box,Left	1
14	GB/T276	Bearing 6000/P5	1	44	GB/T97.1	Washer 5	2	74	CG305F10	Nylon Cutter Head	1
15	BG-328.9.5-2	Gear	1	45	CG305F.14-3	Clamp B	1	75	CG305F.8.1	Case	1
16	CG305F.1-1	Gear Shaft	1	46	CG305F.14-4	Clamp A	1	76	CG305F.8-4	Left Nut	1
17	GB/T276	Bearing 6002-2RS/P5	1	47	BG415-1	Wire Clamp Band	1	77	CG305F.8-5	Washer	1
18	GB/T893.2	Stop Ring 32	1	48	CG260A-CE.1	Harness Assy	1	78	CG305F.8-3	Spring	1
19	BG305.12.4-5	Holder A	1	49	GB/T9074.13	Screw M5×25	6	79		Cord	2
20	CG305F.1-3	Holder B	1	50	CG415D-2	Cap,Lower	1	80	CG305F.8-1	Cord Holder	1
21	GB/T862.1	Washer 10	1	51	CG330B-3	Rubber Washer	2	81	CG305F.8-7	Platen	1
22	CG305F.1-4	Left Nut	1	52	CG415D-3	Bracket	1	82	CG305F.8-2	Cover	1
23	GB/T91	PIN 2×16	1	53	CG415D-2-2	Handle	1	83	BG430.2.6-1	Bracket	1
24	CG420-2	Blade	1	54	CG330B-CE.3-1	Grip Left	1	84	GB/T9074.13	Screw M5×30	2
25	CG415-CE.1	Pipe Comp.	1	55	CG420-3	Cover	1	85	CG420.7.1-1	Safety Guard	1
26	BG-328.9.4-5	Rubber Cover	6	56	CG415D-1	Cap,Upper	1	86	GB/T9074.4	Screw M5×16	4
27	BG-328.9.4-4	Oil-Bearing	6	57	CG411.3-1	Handle	1	87	GB/T845	Screw ST4.2×16	2
28	CG420.2-3	Drive Shaft	1	58	CG260B-CE.1.1	Lever Assy	1	88	CG420.7.1.1-1	Guard	1
29	CG415-CE.1-1	Pipe	1	59	GB/T846	Screw ST2.9×13	1	89	CG420.7.1.1-2	Blade	1
30	CG260.3	Holder Assy	1	60	BL750.3-9	Button	1	90	CG420.7.1.1	Guard Assy	1

FIG. 1 1E34F GASOLINE ENGINE

This technical drawing is an exploded view of a 1E34F gasoline engine, showing the relationship between various components. The parts are numbered as follows:

- 1-10:** Carburetor and intake manifold assembly, including the carburetor body, gaskets, and mounting brackets.
- 11-20:** Various fasteners, including screws and bolts used for the carburetor and timing cover.
- 21-30:** Timing cover and crankshaft components, including the timing cover, crankshaft, and connecting rod.
- 31-40:** Piston and connecting rod assembly, including the piston, connecting rod, and wrist pin.
- 41-50:** Valve train components, including the intake and exhaust valves, springs, and retainers.
- 51-60:** Camshaft and timing components, including the camshaft, timing belt, and tensioner.
- 61-70:** Oil pan and lower engine components, including the oil pan, gaskets, and mounting brackets.
- 71-80:** Various fasteners and small components for the oil pan and lower engine.
- 81-90:** Final assembly components, including the oil pan, gaskets, and mounting brackets.

The diagram illustrates the assembly sequence and the spatial arrangement of the engine parts, from the carburetor at the top to the oil pan at the bottom.

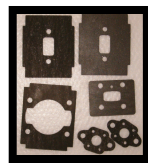

1E34F GASOLINE ENGINE

SER. NO.	PART NO.	PART NAME	QTY.	SER. NO.	PART NO.	PART NAME	QTY.	SER. NO.	PART NO.	PART NAME	QTY.
1	1E34F. 1. 2	SCREW	1	29	1E34F-4	GUIDE PLATE	1	58	1E34F-3	GASKET	1
2	1E34F. 1-4	CLEANER OUTSIDE COVER	1	30	1E34F. 7-2	CRANK CASE GASKET	1	59	1E34F. 2	MUFFLER COMP.	1
3	1E34F. 1-1	CLEANER ELEMENT	1	31	1E36F. 2	OIL SEAL	2	60	1E34F-14	BOLT	2
4	GB9074. 4	SCREW M5×55	2	32	GB276	BALL BEARING 6001/P5	2	61	GB96	WASHER 5	3
5	1E34F. 1. 1	CLEANER INSIDE COVER	1	33	1E40FP-3Z. 3-1	KEY	1	62	GB6187	NUT M5	2
6	GB845	SCREW ST4. 2×12-F-H	1	34	1E34F. 6. 1	CRANK SHAFT COMP.	1	63	1E34F-8	CYLINDER	1
7	1E34F. 1-3	CHOKE	1	35	1E34F. 7-3	REAR HALF CRANK CASE	1	64	1E34F-9	CYLINDER WASHER	1
8	1E34F. 1-2	CHOKE HANDLE	1	36	1E34F. 8. 1	STARTER PULLEY ASS'Y	1	65	1E34F. 6-5	PISTON RING	2
9	WYJ 244	CARBURETOR	1	37	1E34F. 8-2	STARTER PAWL SPRING	1	66	1E34F. 6-6	PISTON	1
10	1E34F-1	GASKET	1	38	1E34F. 8-1	STARTER PAWL	1	67	1E34F. 6-1	STOP RING	2
11	GB9074. 4	SCREW M5×20	6	39	GB9074. 6	SCREW M5×10	1	68	1E34F. 6-3	PISTON PIN	1
12	1E34F. 4	INLET MANIFOLD	1	40	1E34F. 11-1	RECOIL SPRING	1	69	1E34F. 6-4	NEEDLE BEARING	1
13	1E34F-2	CYLINDER WASHER	1	41	1E34F. 11-2	STARTER ROPE REEL	1	70	1E34F. 6-2	PISTON PIN CIRCLET	2
14	GB119	ANNUL B3×10	4	42	1E34F. 11. 1	RECOIL STARTER BODY	1	71	EB-415. 4. 1-1	FUEL TANK LID	1
15	GB9074. 4	SCREW M4×16	9	43	1E34F. 11. 1-1	ROPE GUIDE	1	72	EB-415. 4. 1. 1-1	AIRINLET MOUTH	1
16	1E34F-5	FAN COVER	1	44	1E34F. 11-3	ROPE	1	73	EB-415. 4. 1. 1-3	FRAME	1
17	1E34F-12	CLUTCH STEP SCREW	2	45	1E36F. 1-1	STARTER HANDLE	1	74	EB-415. 4. 1. 1-2	GASKET	1
18	1E34F-13	WASHER	2	46	1E36F. 1-5	GASKET	1	75	1E34F. 9. 2-2	OUTLET FUEL PIPE	1
19	1E34F. 10. 1	CLUTCH SHOE COMP.	2	47	GB9074. 4	SCREW M5×14	1	76	1E34F. 9. 2-1	INLET FUEL PIPE	1
20	1E34F-11	WASHER	2	48	1E34F-6	COVER	1	77	1E36FF. 8. 1-1	PRIMARY CORD GROMMET	1
21	1E34F. 10-1	CLUTCH SPRING	1	49	1E34F. 3	COVER	1	78	1E34F. 9. 2-3	CLEANER	1
22	GB6171	NUT M8×1	1	50	GB9074. 4	SCREW M4×12	1	79	1E34F. 9. 1	FUEL TANK	1
23	GB97. 1	WASHER 8	1	51	1E34F. 5-2	PLUG CAP	1	80	GB9074. 3	SCREW M5×16	1
24	QQ-1	STOP CORD COMP.	1	52	1E40F-3A. 8-2	CLICK SPRING	1	81	GB9074. 4	SCREW M5×16	2
25	1E34F. 5-1	PRIMARY CORD GROMMET	1	53	1E34F. 5-3	PLUG COVER	1	82	1E34F6	STARTER PULLEY ASS'S	1
26	UK-08922	MAGNETO STATOR	1	54	RCJ6Y(CHAMPION)	SPARK PLUG	1	83	1E34F8	STARTER	1
26A	UK-08922A	MAGNETO ROTOR	1	55	GB70	SCREW M5×20	4	84	1E36FF-11	FLASH PAN	1
27	GB9074. 4	SCREW M5×25	4	56	GB93	WASHER 5	4	85	11EB-41541	FUEL CAP, ASSY	1
28	1E34F. 7-1	FRONT HALF CRANK CASE	1	57	GB848	WASHER 5	4	86	860260	ENGINE GASKETKIT	